


CASE RELAY BOARD WIRING DIAGRAM  
MODEL: LT2PCRB-SS

Connector Torque			
Connector	Min Wire Size	Max Wire Size	Torque
J1	10 AWG	6 AWG	11 LB-IN
J11, J15	14 AWG	10 AWG	4.4 LB-IN
J3, J4	20 AWG	14 AWG	3.5 LB-IN

"Use Copper Conductors Only"  
Before service, all breakers must be in the "OFF" Position

Connect to 208VAC with Neutral  
30 Amp Input Protection

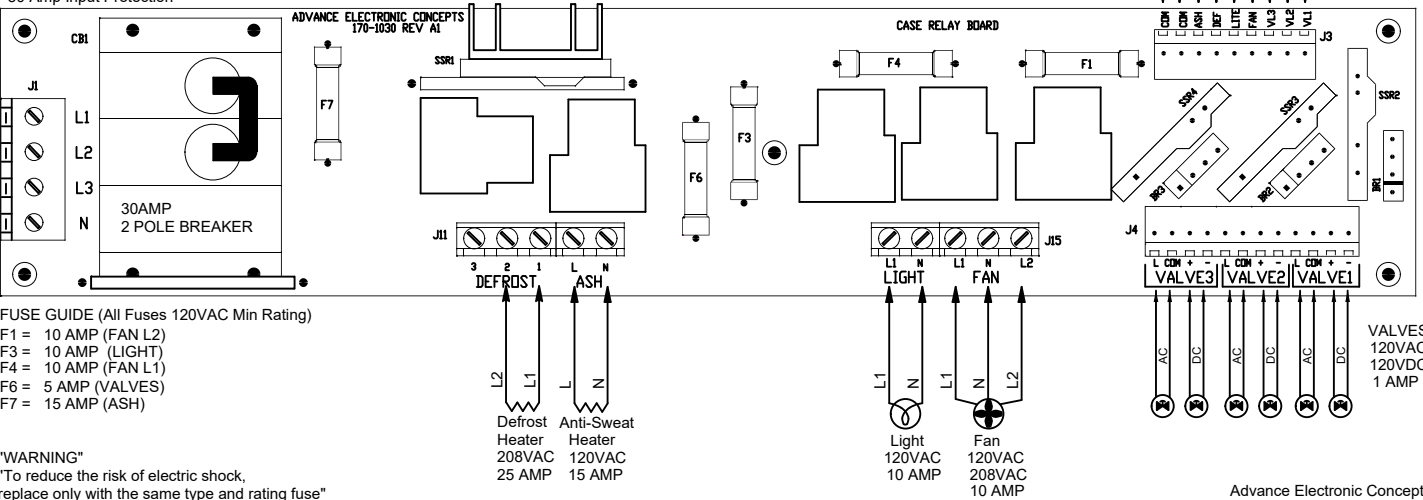

- FUSE GUIDE (All Fuses 120VAC Min Rating)
- F1 = 10 AMP (FAN L2)
  - F3 = 10 AMP (LIGHT)
  - F4 = 10 AMP (FAN L1)
  - F6 = 5 AMP (VALVES)
  - F7 = 15 AMP (ASH)

"WARNING"  
"To reduce the risk of electric shock,  
replace only with the same type and rating fuse"