


CASE RELAY BOARD WIRING DIAGRAM
MODEL: MT1PCRB-SS

Connector Torque			
Connector	Min Wire Size	Max Wire Size	Torque
J1	10 AWG	6 AWG	11 LB-IN
J15	14 AWG	10 AWG	4.4 LB-IN
J3, J4	20 AWG	14 AWG	3.5 LB-IN

"Use Copper Conductors Only"
Before service, all breakers must be in the "OFF" Position

Connect to 120VAC
30 Amp Input Protection

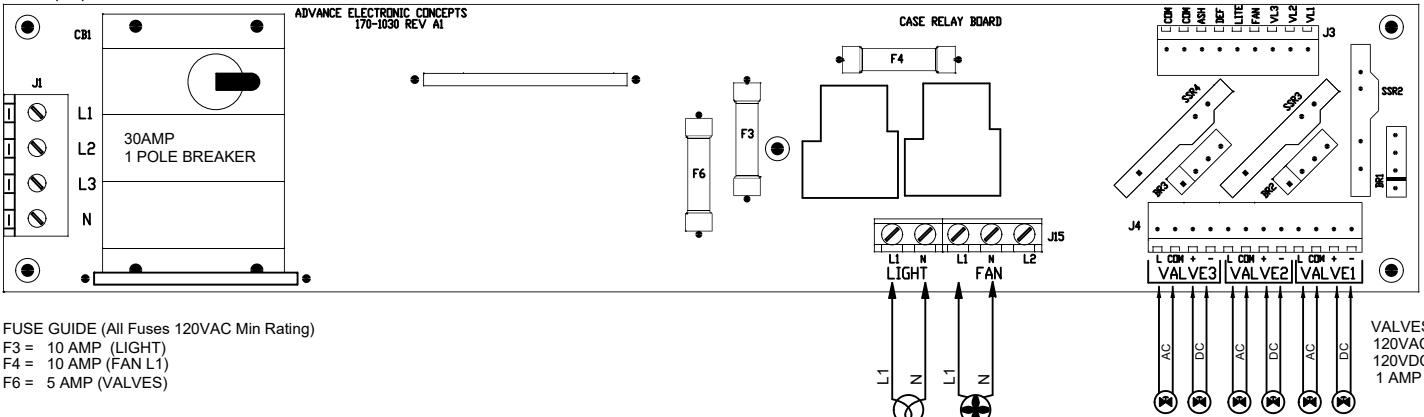

FUSE GUIDE (All Fuses 120VAC Min Rating)
F3 = 10 AMP (LIGHT)
F4 = 10 AMP (FAN L1)
F6 = 5 AMP (VALVES)

"WARNING"
"To reduce the risk of electric shock,
replace only with the same type and rating fuse"