


CASE RELAY BOARD WIRING DIAGRAM  
 MODEL: DRB-2P

"Use Copper Conductors Only"

Before service, all breakers  
 must be in the "OFF" Position

Connect to 208VAC  
 30 Amp Input Protection

J10 and J11 are for connecting  
 to J10 and J11 of CRB ONLY

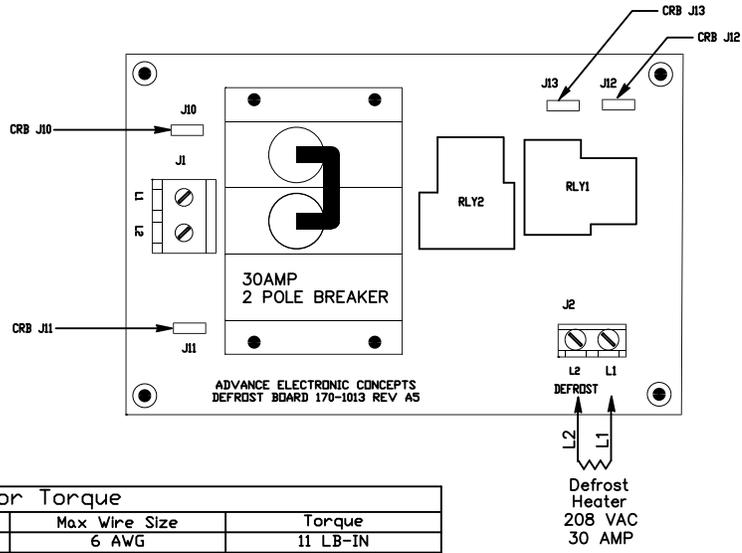

Connector Torque

Connector	Min Wire Size	Max Wire Size	Torque
J1	10 AWG	6 AWG	11 LB-IN
J2	14 AWG	10 AWG	4.4 LB-IN